


# I-Trac™ Backplane Module Installation Application Tooling Specification Press-In Tool Order No. 62201-8625

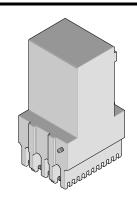

### **FEATURES**

- Polarized tool prevents product damage.
- Tool provides uniform distribution of press force across entire pin array.
- May be used as a stand-alone tool or mounted in an optional holder with other Molex press-in tools.

#### **SCOPE**

<u>Products</u>: I-Trac™ Backplane Signal Module Assembly, 75985 Series 6 Column Assemblies. See Product List below for specific part numbers.


#### **Product List**

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on www.molex.com.

Guide Style	Columns	Assembly Order Number					
Open	6	75985-0602	75985-0603	75985-0604	75985-1602	75985-1603	75985-1604
Left	6	75985-2602	75985-2603	75985-2604	75985-3602	75985-3603	75985-3604
Right	6	75985-4602	75985-4603	75985-4604	75985-5602	75985-5603	75985-5604

### **Tool Setup**

Depending on the number of connectors to be installed and/or the press used, this tool can be used alone or with a group of press-in tools, mounted in a 62201-95XX rail (ordered separately). See Figure 1.

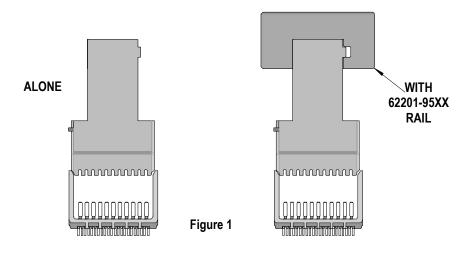

Doc No: ATS-622018625 Release Date: 09-27-06 **UNCONTROLLED COPY** Page 1 of 3

Revision: C Revision Date: 02-18-09

#### **Tool Installation**

The 62201-95XX rail is available in a variety of lengths to accommodate multiple press-in tools.

Rail Part Number	Rail Overall Length
62201-9501	24mm (0.94 in)
62201-9502	72mm (2.83 in)
62201-9503	156mm (6.14 in)
62201-9504	216mm (8.50 in)
62201-9509	254mm (10.0 in)
62201-9511	305mm (12.0 in)

Reference: This Press-In Tool is 22.2mm (0.87 in.) long.

### **Printed Circuit Board (PCB) Support**

The I-Trac™ connectors require up to 1.81kg (4 lb) of force per pin to press into the PCB. To prevent excessive PCB flexure and/or damage to the PCB, a support plate is strongly recommended directly beneath the connector hole pattern.

Due to the custom nature of every application, Molex does not offer any PCB support plate. The customer must furnish their own support plate.

When creating the PCB support plate, remember to allow clearance for the connector pins as they pass through the PCB thickness.

## **Press Equipment Recommendations**


Many types of presses can be used to install I-Trac™ connectors, but to assure consistent connector installation Molex recommends the following press criteria:

- 1. The capability to detect force variations as low as 4.5kg (10 lb) during the press-in cycle; excessive force measurements should stop the press-in cycle.
- 2. The rate of pressing can be regulated as low as 0.13mm (0.005 in) per second.
- 3. Press stroke control to within 0.25mm (0.010 in).
- 4. Total press stroke must be at least 19mm (0.75 in).
- 5. For statistical purposes, automatic collection of force and distance data.

**UNCONTROLLED COPY** Doc No: ATS-622018625 Release Date: 09-27-06 Page 2 of 3 Revision: C

### **Tool Operation**

- 1. Carefully insert, by hand, the backplane signal module(s) into the PCB hole pattern. Make sure the connector(s) are oriented properly by confirming the location of the #1 circuit notch with respect to the PCB layout.
- 2. Insert the application tool into the header assembly with the orientation peg on the tool entering the #1 circuit notch at the top of the connector housing. See Figure 2.

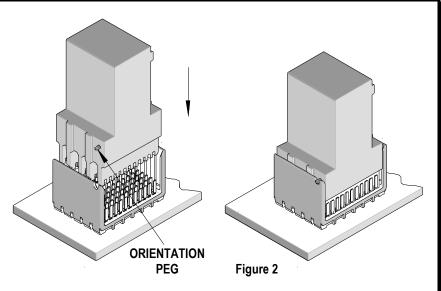

3. Using the application tool and an appropriate press, seat the header assembly until there is less than 0.10mm (.004 in) clearance between the bottom of the plastic housing and the surface of the PCB. See Figure 3.

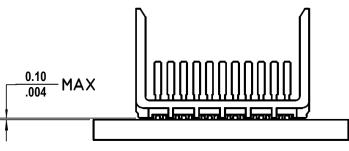


Figure 3

There should be no broken stand-offs along the perimeter of the part (an indication of over-pressing).

**CAUTION**: To prevent injury, never operate any press without the guards in place. Refer to the press manufacturer's instruction manual.

**CAUTION**: Molex application tooling specifications are valid only when used with Molex connectors and toolina.

#### **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com

Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

**European Headquarters** Munich, Germany 49-89-413092-0 eurinfo@molex.com

**Corporate Headquarters** 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

**UNCONTROLLED COPY** Doc No: ATS-622018625 Release Date: 09-27-06 Page 3 of 3 Revision Date: 02-18-09

Revision: C